

HOW TO SET UP YOUR MINER




When your Miner arrives, carefully unpack all the parts and check the completeness of your order.

1

Connect the antenna to the router and the router to the power supply.

2

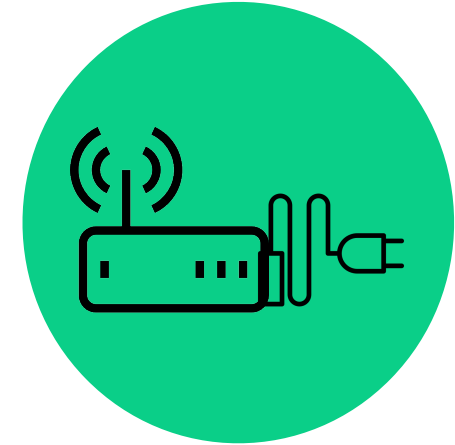


Choose the right location for your miner. We strongly recommend placing the router next to a window. If possible, place the antenna with the included stand outside the window for optimal reception.

3



To share your port search in your wifi router interface for: "internet" - "shares" - "port releases" - "add devices". Then enter the port number "44158", confirm with ok. Your port is released.

4

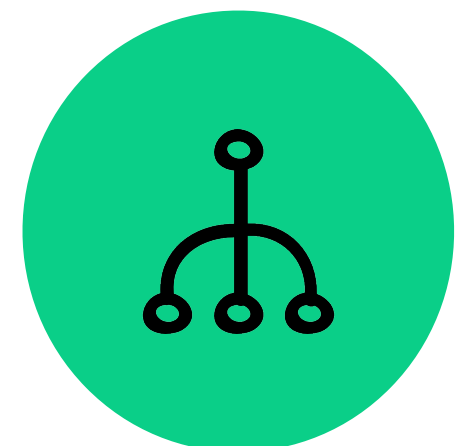

Download the official Helium app on your smartphone. Search for your equipment and follow the onboarding to add your router.

5



You're done. Congratulations!

Your miner has no signal? No need to panic. Sometimes it takes a while for the location to log in. If you still have problems after a few days, please contact us.

6

